

For Flash Bang Grenade Models:
CTS 7290 Mini
Rheinmetal MK 13
Safariland Low Roll II



THE GRENADE TRIGGER POUCH

2 Bergman st., Park Rabin, Rehovot, Israel

Tel: + 9 7 2 - 5 8 - 6 6 4 6 1 2 1

E-Mail: acs@acs-grenade.com

www.acs-grenade.com



THE GRENADE TRIGGER POUCH

Express Limited Warranty for the Grenade Trigger Pouch (the "Product")

A.C.S. Industries Ltd. (the "Company") warrants the abovementioned Product (which includes for the purpose of this Warranty any accompanying parts) to be free from defects in materials and workmanship for a period of one (1) year from the Purchase Date (the "Warranty Period"). This Warranty is subject to the safety precautions and maintenance of the Product and proper use of the Product as detailed in the Product documentation provided by the Company. If the Product or any part thereof proves to be defective in material or workmanship, the Company will repair or replace the defective part at its sole discretion, subject to return of the defective Product, including its invoice, to the Company within the Warranty Period.

Warranty Limitations

This Warranty does not cover loss or theft, nor does it cover damages caused by abnormal use, inappropriate use, abuse, unauthorized alteration, force major or if Precautions and Maintenance instructions supplied with the Product are not followed.

This Warranty extends only to customers who purchased the Product directly from the Company and is not transferable.

THE FOREGOING LIMITED WARRANTY IS THE CUSTOMER'S SOLE AND EXCLUSIVE WARRANTY OF THIS PRODUCT, AND IS IN LIEU OF ANY AND ALL OTHER WARRANTIES, GUARANTEES, PROMISES, OR REPRESENTATIONS WHETHER WRITTEN, ORAL OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY, SATISFACTORINESS OR FITNESS FOR ANY PARTICULAR PURPOSE OR USE.

COMPANY'S CUMULATIVE LIABILITY UNDER THIS WARRANTY FOR ALL CAUSES OF ACTION SHALL BE LIMITED TO AND NOT EXCEEDS THE CONSIDERATION PAID BY THE CUSTOMER FOR THE PRODUCT. COMPANY SHALL NOT BE LIABLE FOR LOSS OF PROFITS, INTERRUPTION OF BUSINESS, OR FOR ANY OTHER SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES, THAT MAY ARISE FROM ANY CAUSE RELATING TO THE PRODUCT, WHETHER FOR BREACH OF WARRANTY, CONTRACT, TORT, NEGLIGENCE, STRICT LIABILITY OR OTHERWISE, REGARDLESS OF WHETHER THE COMPANY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR THAT ANY REMEDY SET FORTH HEREIN FAILS OF ITS ESSENTIAL PURPOSE OR OTHERWISE.

If questions arise pertaining to care/maintenance of the Product as subject to this Warranty, please contact the Company for assistance.

All claims under this Warranty shall be made in writing to: **A.C.S. Industries Ltd.**



GRENADE TRIGGER POUCH



Attachment to the vest and tactical belt

1. Select strategic area for placement on the vest accessible by both hands.
2. Insert the upper pouch clips behind the vest strips (clips can also be inserted between the stitches) – upper pouch clips will fit through the first two strips and touch the top of the third strip.
3. To fit the lower pouch clips under the third vest strip, pull the pouch downwards beyond the second level of vest strips and insert the lower pouch clips behind the third level of vest strips. Once inserted, pull the pouch upwards for final placement on the pouch.
4. Lock the upper clips into place.
5. Ensure that the Trigger Pouch is locked with the safety catch.

Loading the Trigger Pouch

1. To open the top cover, release safety catch and simultaneously press side buttons.
2. For CTS and Safariland grenades with additional ring lock - release the pull ring from the lock.
3. Thread string through pull ring.
For CTS and Safariland grenades - thread string through pull ring twice where the ring is widest.
4. Take care not to pull the pull ring during loading.
5. Insert the grenade in the Trigger Pouch; make sure the safety lever (spoon) is secured within the lever protection.
6. Before closing the top cover, ensure that the ring is hidden between the grenade and the back of the pouch.
7. Close the top cover.
8. Thread the pull string onto the hook on the back of the Trigger Pouch, make sure it is secure.
9. Lock the buttons by lifting the safety catch.

Operating Instructions

1. Wrap hand around the grenade placing fingers on the side buttons.
2. Click down safety catch, pressing the side buttons simultaneously.
3. Wrap hand around the grenade – ensuring you're holding the safety lever.
4. Pull the grenade away from the Trigger Pouch in one strong and smooth pull - keeping the grenade level with the pouch.



Please Note!!! The grenade is now in your hand without a safety pin and is ready to be thrown.

ONCE EXTRACTED FROM POUCH, DO NOT SWITCH HANDS.

Removing the Trigger Pouch from vest

1. To unlock the upper pouch clips, push clip down towards back of pouch and outwards.
2. Release the lower pouch clips.
3. Pull pouch upwards through the vest strips.

To safely remove the unused grenade from the Trigger Pouch:

1. Disconnect the pull string from the hook at the back of the pouch.
2. Open the safety catch and press the side buttons.
3. Remove the pull string from the grenades pull ring.
4. Remove the grenade.
5. Close the top cover.

General Precautions

1. When attaching the Trigger Pouch to the vest make sure the pouch clips are secured and locked.
 2. When threading the pull string do not pull the ring.
 3. Make sure that the safety catch is facing up and locks the side buttons.
 4. Do not block the top cover.
 5. When extracting the grenade from the Trigger Pouch ensure that your hand is wrapped around the lever (spoon).
- * As soon as the grenade is pulled from the device without the pull ring it is activated and ready to be thrown.

Maintenance

1. Do not clean the Trigger Pouch when a grenade is in it.
2. The Trigger Pouch should be cleaned after use with pressurized air, damp rag or running water (under tap).
3. Do not use any cleaning agents other than water.
4. Do not cut or make any change to the Trigger Pouch.