

MOTOROLA

M1



Radio Model

BC10, BC120, BC130, BC250D, BC90, BC95, BPR40, CLS Series, CP100, CP110, CP120, CP125, CP150, CP185, CP200, CP200d, CP88, CT150, CT250, CT450, CT450LS, DP1400, DTR Series, EP-450, GP2000, GP280, GP300, GP308, GP350 (requires Motorola adapter HLN9482), GP68, GP88, GTI, GTX, LTS2000, MAG ONE, P040, P080, P110, P1215, P1225LS, PR400, PRO3150, RDU Series, RDV Series, RDX Series, RM Series, SP10, SP21, SP50, VL130, VL50, XTN446, XTN500, XTN600, XU1100, XU2100, XU2600, XV1100, XV2100, CP1000, CLS1410, CLS1410

M10



Radio Model

MTH650, MTH800, MTH850, MTP850, Single pin with locking screw for Tetra MTH500, XTS4000, XTS4000

M11



Radio Model

APX1000, APX3000, APX4000, APX6000, APX6000XE, APX7000, APX7000XE, APX8000, APX8000XE, APX900, DGP4150, DGP4150+, DGP6150, DGP6150+, DP3400, DP3401, DP3600, DP3601, DP4400, DP4600, DP4800, MTP6550, MTP6750, SRX 2200, TRBO-XPR4500, XiRP8200, XiRP8208, XiRP8260, XiRP8268, XPR6100, XPR6300, XPR6350, XPR6380, XPR6500, XPR6550, XPR6580, XPR7300, XPR7350, XPR7380, XPR7500, XPR7550, XPR7580, SRX2200, XPR7350E, XPR7550E, XPR7580E, XPR7580E

M15



Radio Model

CLPE Series, Nitro - SLN1000, SL300, SL3500, SL3500E, SL500, SL7550, SL7550E, SL7580, SL7580E, SL7590, SL7590E, T-100, TLK100, SLE500, SLE500

M16



Radio Model

Motorola CLP Series, CLP1010, CLP1040, CLP1060, CLP1060

M17



Radio Model

DP2000, DP2400, DP2600, DP3441, XPR3300, XPR3300/3500 Series, XPR3300E, XPR3500E, XPR3500E

M2



Radio Model

GP1280, GP140, GP320, GP328, GP329, GP338, GP339, GP340, GP360, GP380, GP640, GP650, GP680, HT1250, HT1250LS, HT1550, HT1550XLS, HT750, MTP700, MTX4500/4550, MTX8250, MTX8250LS, MTX850, MTX850LS, MTX9250, MTX950, PR860, PRO5150, PRO5350, PRO5450, PRO5550, PRO5750, PRO7150, PRO7350, PRO7450, PRO7550, PRO7750, PRO9150, PTX700, PTX760, PTX780, PTX780

M3



Radio Model

EX500, EX560XLS, EX600, GL2000, GP328Plus, GP338Plus, GP344, GP388, PRO5150elite, EX560, EX560

M4



Radio Model

SABRE radio series, SABRE radio series

M5



Radio Model

GP900, GP9000, HT1000, JEDI, JT1000, MT2000, MTS2000, MTX-LS, MTX8000, MTX838, MTX900, MTX9000, MTX960, PM1500, PR1500, XTS1500, XTS2500, XTS3000, XTS3000Astro, XTS3500, XTS5000, XTS5000

M6



Radio Model

VISAR radio series, VISAR radio series

M8



Radio Model

5522, 5820, 6200, 6210, 6220, 6250, 6300, 6320, 6400, FR50, FR60, FRS 5512, T270, T280, T289, T5100, T5200, T5300, T5320, T5400, T5410, T5420, T5800, T7200 series, T7200 series

M9



Radio Model

i205, i215, i265, i275, i285, i305, i315, i325, i335, i355, i365, i415, i450, i465, i530, i560, i570, i576, i580, i605, i615, i670, i710, i730, i830, i860, ic402, ic502, ic602, ic902, Nascar Nextel Cup Series Driver Phones, NEXTEL Falcon Series, Single pin stereo for Nextel, Tetra MTH650/800, i680, i720, i733, i736, i740, i760, i776, i833, i835, i836, i850, i855, i870, i875, i880, i890, i920, i930, i930

KENWOOD

K1



Radio Model

2102/3102(Pro Power), 2130/3130(Pro Talk XLS), 2160/3160, NexEdge NX220, NX1200, NX1300, NX240, NX320, NX340, NX420, TH-072A, TH-22AT, TH-235A, TH-28A, TH-42AT, TH-48A, TH-77A, TH-78A, TH-D7A(G), TH-F6, TH-F6A, TH-G71A, TH-K2AT, TK-170, TK-208/308, TK-2100/3100(Pro Talk), TK-2170/3170, TK-220/320, TK-2200, TK-2202/2302, TK-2212/2312, TK-2300, TK-2360, TK-240/340, TK-240D/340D, TK-248/348, TK-250/350, TK-260/360, TK-260G/360G, TK-270/370, TK-270G/370G, TK-3101(Free Talk XL), TK-3131(Free Talk XLS), TK-3173, TK-3200/3201/3202, TK-3212, TK-3230, TK-3350, TK-3360, TK-353, TK-372G, TK-373, TK-430, TK-431, TK2312/3312, TK2400/3400, TK2402VK/3402UK, TK3230XLS, TK3300, TK3302, TK3302

K2



Radio Model

NX-200, NX-210, NX-300, NX-410, NX-5200, NX-5300, NX-5400, TK-190/290/390, TK-2140/3140, TK-2180/3180/4180, TK-280/380/480, TK-3148, TK-3212, TK-385, TK-481, TK-5210, TK-5220, TK-5310/5410, TK-5320/5420, TK-5400, TK-5410, NX3200, NX3300, NX3300

K3



**Radio Model**

PKT-23 Protalk Radio, PKT-23 Protalk Radio

K5

**Radio Model**

NX-P500, NX-P500

VERTEX

VY1

**Radio Model**

VX-10, VX130, VX160, VX180, VX210, VX210A, VX230, VX231, VX300, VX350, VX351, VX354, VX400, VX410, VX420, VX426, VX450, VX454, VX459, VX451, VX451

VY1A

**Radio Model**

VX130-Mounting Screws, VX160-Mounting Screws, VX180-Mounting Screws, VX210A-Mounting Screws, VX230-Mounting Screws, VX231-Mounting Screws, VX261-Mounting Screws, VX264-Mounting Screws, VX350-Mounting Screws, VX351-Mounting Screws, VX354-Mounting Screws, VX400-Mounting Screws, VX410-Mounting Screws, VX420-Mounting Screws, VX451-Mounting Screws, VX454-Mounting Screws, VX459-Mounting Screws, VX417-Mounting Screws, VX427-Mounting Screws, VX450-Mounting Screws, VX426-Mounting Screws, EVX530/531/534/539(eVerge), EVX530/531/534/539(eVerge)

VY2

**Radio Model**

MH-360M, MH-450M, MH-50A7A, VH-110, VH-120, VH-130, VH-215M, VH-225M, VH115M, VX600, VX800, VX900, VX900

VY3

**Radio Model**



VTX720, VX820, VX821, VX824, VX829, VX871, VX874, VX879, VX920 VX921, VX924, VX929, VX971, VX974, VX979, VXD720, VXD720

VY4



Radio Model

VX500, VX510, VX520, VX520

VY5



Radio Model

VX537, VX537

VY6



Radio Model

EVX-S24, EVX-S24

ICOM

I2



Radio Model

F11, F11S, F14, F14S, F15, F21, F21S, F22, F24, F24S, F3001/F4001, F3011/F4011, F3021/F4021, F3021S/F4021S-Mount Screws, F3021T/F4021T-Mount Screws, F31, F33/F43, F3G/F4G, F3GS/F4GS, F43GS, F43GT, F43TR, F3GT/F4GT, BC100, BC100

I3



Radio Model

F11-Mount Screws, F14-Mount Screws, F14S-Mount Screws, F24-Mount Screws, F24S-Mount Screws, F3001/F4001-Mount Screws, F3003/F4003-Mount Screws, F3011/F4011-Mount Screws, F3021/F4021-Mount Screws, F3021S/F4021S-Mount Screws, F3021T/F4021T-Mount Screws, F3041/F4041-Mount Screws, F31-Mount Screws, F3101/F4101-Mount Screws, F3G/F4G-Mount Screws, F3GS/F4GS-Mount

Screws, F43TR-Mount Screws, BC100-Mount Screws, F33G/F43G-Mount Screws,
F33G/F43G-Mount Screws

I5



Radio Model

F30/40 Series, F3061/F4061 Series, F31/41 Series, F3161/F4161 Series,
F50/60/70/80 Series, F51/61, M87/88, M87/88

I6



Radio Model

F3261/F4261, F3400D/4400D, F9011, F9021, F6400, F7010, F7020, F7040, F5400,
F7210, F3260, F3360D, F4261D, F3263, F4360, F52D, F62D, F62D

I7



Radio Model

BC1000, F1000/2000 Series, F3031/4031, F3032S/4032S, F3033/4033, F31W/41W,
F3230D/4230D, V88, F4210D, F11000, F2100D, F2100D

I8



Radio Model

Aviation A25, IP-501H, IP100H, IP501H, IP501H

HYTERA

HYT2



Radio Model

BD502, HYT2100, PD402, PD405, PD412, PD415, PD41X, PD482, PD500, PD502,
PD506, PD508, PD562, TC1600-Locking Screw, TC2100-Locking Screw, TC508,
TC518, TC580, TC610, TC700-Locking Screw, Titan, TR200, TR400, TC500, TC600,
TC620, TC620

HYT3





Radio Model

PD700 Series, PD702, PD752, PD782, PD792, PD985, PD982i, PD982i

HYT4



Radio Model

TC320, TC320

HYT5



Radio Model

HP Series, PD600 Series, PD602, PD662, PD682, X1 Series, X1 Series

HYT6



Radio Model

BD3 Series, BD302, BD352, HALO, PD3 Series, PD352, PD362, PNC370, PNC3805, X1E, X1PI, X1PI

M2



Radio Model

TC980, TC980

M3



Radio Model

TC-610P, TC-700P, TC-780M, TC-880GM, TC3000, TC3600, TC3600M, TC780, TC780

M8



Radio Model

PD360 Series, TC1688, TC310, TC310

BENDIX KING

BK1



Radio Model

DPH, GPH Series, LPH, LPH

BK2



Radio Model

KNG-P150, KNG-P150

K1



Radio Model

RPU416, RPU416A, RPU4200, RPU499, RPU499A Plus, RPV516, RPV516A, RPV599A Plus, RPV599X, RPV599X

M1



Radio Model

RP6500, RP6500

M3



Radio Model

3300C, RPU3000, RPU3600, RPV3000, RPV3600, RPV7500, RPV7500

TAIT

T1



Radio Model

TP7100, TP7110 Series, TP8100 and 9400 Series, TP8100 Series, TP9100 Series, TP9300, TP9400, TP9400 Series, TP900 Series, TP900 Series

T2



Radio Model

TP9000 Series, TP9100 Series, TP9100 Series

HARRIS

HYT3



Radio Model

HDP100, HDP150, Momentum, Momentum

HYT5



Radio Model

HDP250, HDP250

MC2



Radio Model

Jaguar 700P, P5100 Series, P5200 Series, P7100 Series, P7200 Series, P7200 Series

MC3



Radio Model

P5300 Series, P5350, P5370, P5400 Series, P5450, P5470, P5500 Series, P5570, P7300 Series, P7350, P7370, P7400, UNITY XG-75, XG-15, XG-25, XG-75, XG-75

MC4



Radio Model

XG-100P, XL-200P, XL-400P, XL-185P, XL-185P

6-PIN QUICK DISCONNECT

M7



Radio Model

EF JOHNSON

K2



Radio Model

VP5230, VP5330, VP5430, VP6230, VP6330, VP6430, VP6430

M5



Radio Model

51 Fire ES, 5100 ES Series, 51LT ES, 51SL ES Series, AN/PRC 127EFJ, Avenger 8100 Series, Multi-Net Ascend ES Series, Viking CK8500 Series, Viking Fire, Viking VP600, VP900, VP900

MAXON/LEGACY

M1



Radio Model

TJ3100, TJ3400, TP5116, TP5416, TP8000, TP8102, TP8402, TS2116, TS2416, TS3116, TS3416, TSD4416, TSD4416

M11



Radio Model

TPD1124, TPD1424, TPO-1116, TPO1416, TPO1416

M15



Radio Model

TPD8124, TPD8424, TPD8424

MA1



Radio Model

PL1145, PL2215, PL2245, PL24125, PL2445, SL25, SL55, SP100, SP120, SP130, SP140, SP140

MIDLAND

K1



Radio Model

BR180, BR200, BR200

M7



Radio Model

STP404A, STP404A

MD1



Radio Model

G225, G227, G300, GXT250, GXT310, GXT325, GXT400, GXT450, GXT500, GXT550, GXT565, GXT600, GXT650, LXT210, LXT216, LXT303, LXT305, LXT310, LXT350, LXT410, LXT420, LXT435, LXT435

NEXUS

NX1



Radio Model

TJ-101, TJ-102, TJ-120, TJ-120

SEPURA

SP1



Radio Model

SRH3800, SRP2000, SRP3000, SRH3500, SRH3500

SP2



Radio Model

SRP2000-Locking Screws, SRP3000-Locking Screw, SRH3500-Locking Screw, SRH3800-Locking Screw, SRH3800-Locking Screw

SP3



Radio Model

SRP2000-Bottom Mount, SRP3000-Bottom Mount, SRH3500-Bottom Mount, SRH3800-Bottom Mount, SRH3800-Bottom Mount

SP4



Radio Model

CC230, STP8000, STP9000, STP9200, STP9100, STP9100

SONIM

ST1



Radio Model

XP5, XP6, XP7, XP7

TEKK

M1



Radio Model

XU100, XU1000, XV100, XV1000, XV1000

WOUXUN, LINTON, PUXING, WEIERWEI, FDC

K1



Radio Model

FD-268A/B, FD-278, FD-289, FD-6288, KG-659, KG-669, KG-669 PLUS, KG-679, KG-679 PLUS, KG-689, KG-689 PLUS, KG-699E, KG-UVD1P, LT-2188/3188/6188, LT-2268/3268, LT-2288/3288/5288/6288, LT-3260, PX-328, PX-666, PX-777, PX-777 PLUS, PX-888, PX-888K, PX-999, V-1000, VEV-3288S, RT22, RT22

RCA RADIO

HYT2



Radio Model

BR150, BR200U, BR850, RDR1520, RDR2300, RDR2320, RDR2325, RDR2385, RDR2500, RDR2550, RDR2560, RDR2620, RDR2650, RDR2680, XPR150, XPR150

M11



Radio Model

P25-Portable, RDR3500, RDR3600, RDR4220, RDR4250, RDR4280, RPX4500, RPX4600, RPX4600

ZEBRA

Z1



Radio Model

TC20, TC25, TC51, TC52, TC55, TC56, TC57, TC70, TC72, TC75, TC77, TC8000, TC8000

DIGA-TALK

K1



Radio Model

9750, 9751, 9850, 9850