

FERRO CONCEPTS FCPC V5


SHOULDER STRAP HARDWARE INSTALLATION



FAILURE TO INSTALL SHOULDER STRAP HARDWARE CORRECTLY COULD RESULT IN CARRIER MALFUNCTION AND/ OR IMPROPER FIT. PLEASE FOLLOW INSTRUCTIONS CAREFULLY.



1. INSTALL FEMALE BUCKLE END ON FRONT PLATE BAG WEBBING STRAP. CHOOSE PREFERRED SIDE.

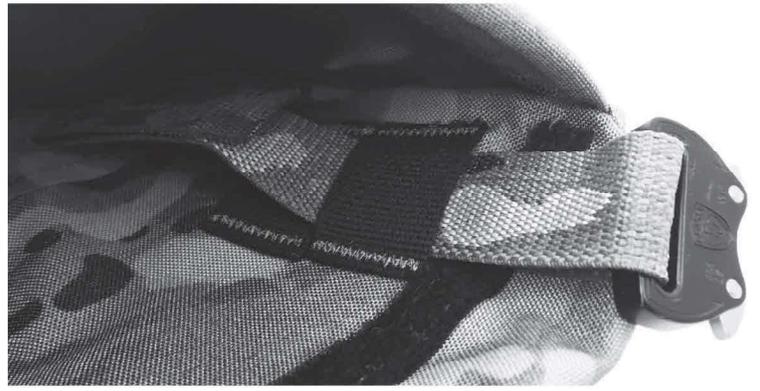

2. WEAVE THE WEBBING STRAP UNDER THE FIRST MOLLE ROW LOCATED INSIDE THE ADMIN PANEL OF CARRIER.



3. WEAVE THE WEBBING STRAP OVER THE NEXT ROW OF MOLLE. THEN TUCK THE RIGID TUCK TAB UNDER.




4. SEAT TUCK TAB IN FULLY. PULL UPWARDS TO CONFIRM WEBBING STRAP IS TUCKED AND SECURELY IN PLACE.




5. REPEAT STEPS 1-4 FOR OPPOSING SIDE USING RING. FRONT PLATE BAG HARDWARE IS NOW INSTALLED.



6. INSTALL MALE BUCKLE END ON THE 1 INCH END OF THE FRONT SHOULDER STRAP.

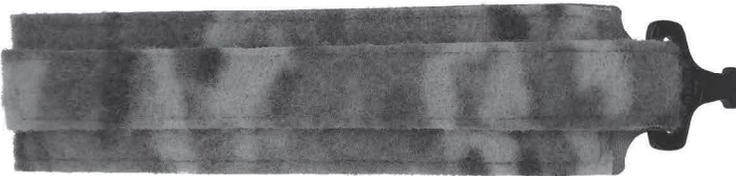

7. ADHERE THE HOOK AND LOOP SECTIONS OF THE FRONT SHOULDER STRAP TO SECURE HARDWARE.

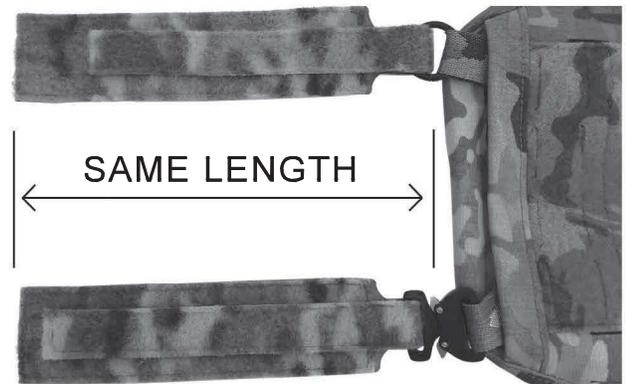

8. ADJUST THE FRONT SHOULDER STRAPS TO EQUAL LENGTHS. THIS IS IMPORTANT FOR PROPER FIT.

INSTALLATION OF FRONT FLAPS FOR G-HOOK FERRO CONCEPTS FRONT FLAPS

MAY FIT FLAPS/ POUCHES WITH G-HOOKS FROM OTHER COMPANIES. FERRO CONCEPTS DOES NOT GUARANTEE FITMENT OF NON FERRO CONCEPTS PRODUCTS. THE FCPC V5 WILL NOT WORK WITH OLDER VELCRO TOP FRONT FLAPS.



1. FIND THE HIDDEN LOOPS LOCATED UNDER THE FLAP ON THE FRONT OF THE CARRIER.



2. INSTALL THE G-HOOK OF THE FRONT FLAP FULLY INTO THE LOOP.



3. REPEAT FOR THE OPPOSING SIDE. ENSURE BOTH SIDES ARE FULLY HOOKED INTO THE LOOPS.



4. PULL DOWN GENTLY ON FRONT FLAP TO REMOVE ANY SLACK ON G-HOOKS AND ADHERE FLAP TO CARRIER.

INSTALLATION OF QASM BUCKLES FOR BUCKLE TOP FERRO CONCEPTS FRONT FLAPS

QASM BUCKLES INSTALLED ON FERRO CONCEPTS PLATE CARRIERS MAY BE COMPATIBLE WITH FLAPS/ POUCHES FROM OTHER COMPANIES. FERRO CONCEPTS DOES NOT GUARANTEE FITMENT OF NON FERRO CONCEPTS PRODUCTS.



1. INSTALL TOP BUCKLE BAR INTO UPPER VERTICAL MOLLE SLOT ON THE FRONT OF THE CARRIER.



2. INSTALL BOTTOM BUCKLE BAR INTO LOWER VERTICAL MOLLE SLOT ON THE FRONT OF THE CARRIER.



3. WHEN INSTALLED CORRECTLY, BUCKLE BARS SHOULD BE FULLY SEATED IN THE VERTICAL MOLLE SLOTS.



4. REPEAT STEPS 1-3 ON THE OPPOSING SIDE. ENJOY.